


6.Function and Control

6.1 Remote Control Operations

Note: This wireless remote control is universal, and it could be used for many other models. The buttons that are not relevant to this unit will not be described below.

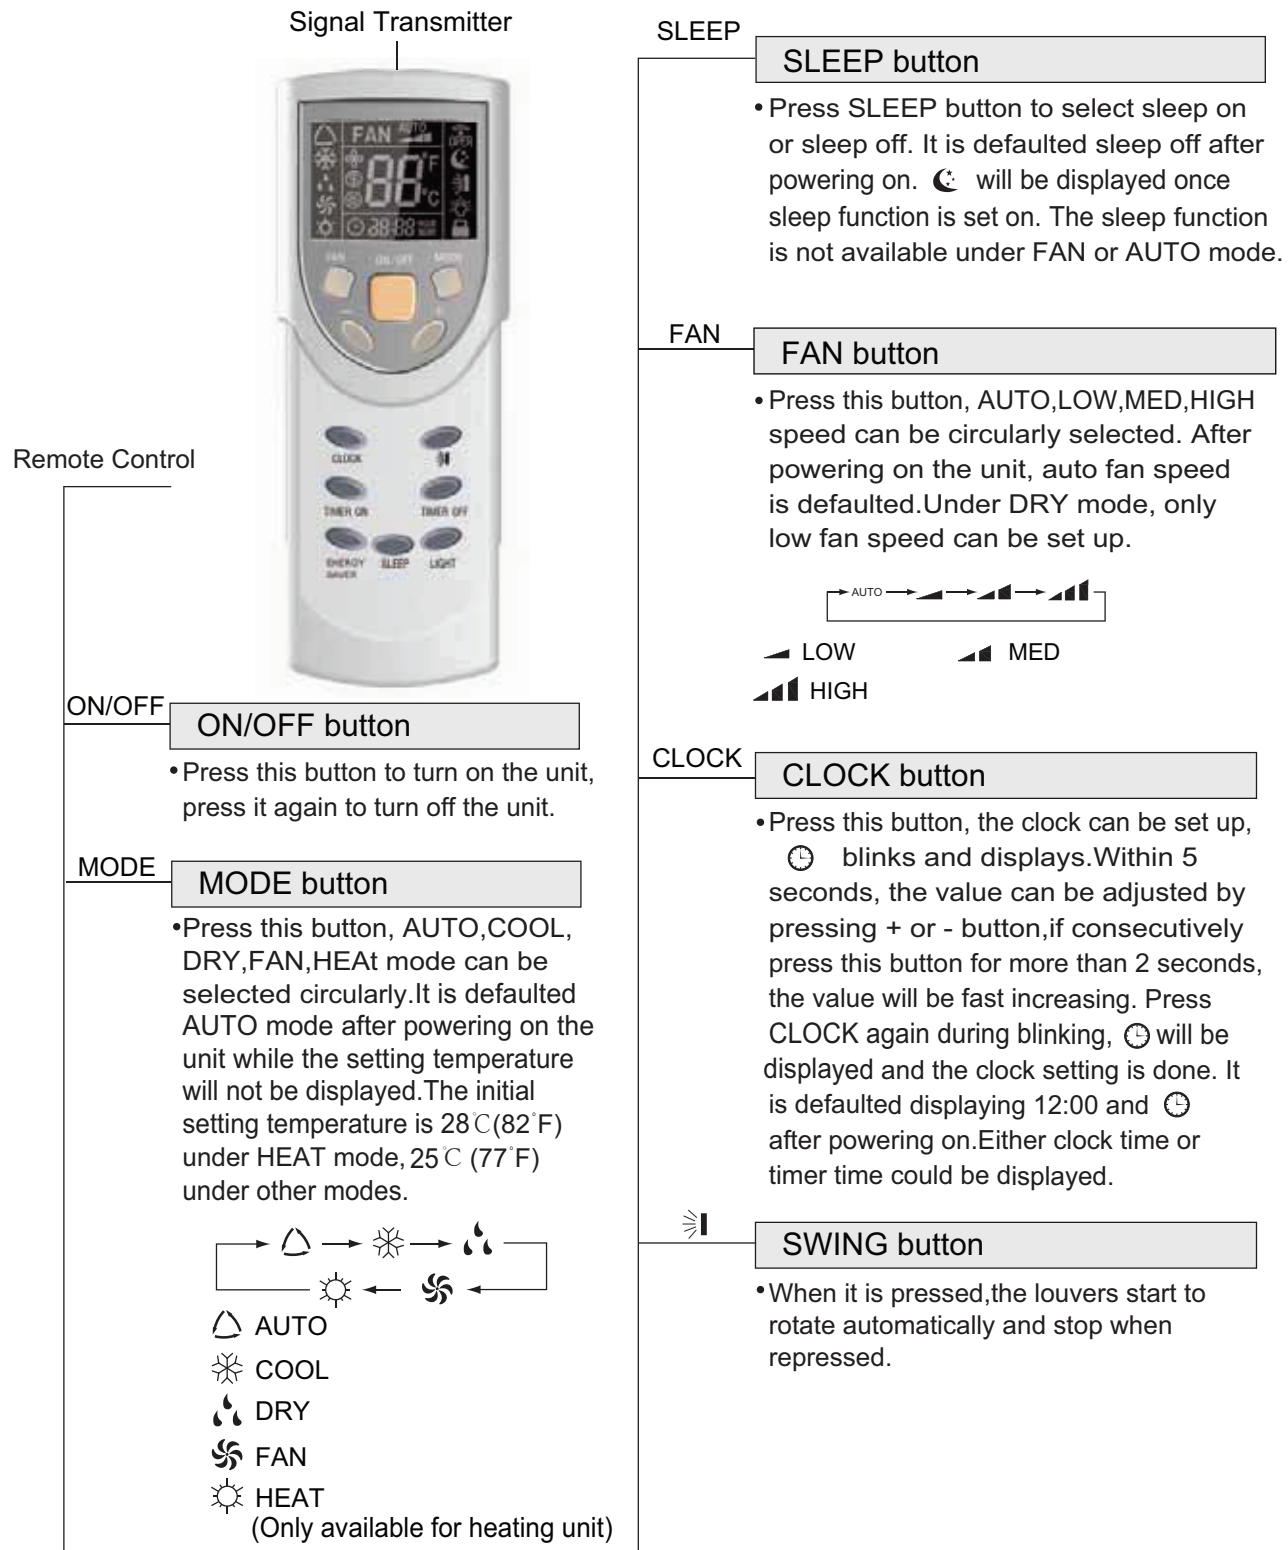

Note: This wireless remote control is universal, and it could be used for many other models. The buttons that are not relevant to this unit will not be described below.



Remote Control

ENERGY SAVER

ENERGY SAVER button

- Under the COOL and DRY mode, press this button once, the unit will enter ENERGY SAVER mode. Press this button again, the unit will exit ENERGY SAVER mode.

LIGHT

LIGHT button

- Press this button to turn ON or OFF the light or display on the unit. The light or display is defaulted on after powering on the unit.

+

+ button

- Press this button to increase setting temperature, hold for more than 2 seconds to rapidly increase setting temperature. In AUTO mode, setting temperature is not adjustable. Setting temperature Range of Celsius degree: 16-30°C, Fahrenheit degree: 61-86°F.

 
-

- button

- Press this button to decrease setting temperature, hold for more than 2 seconds to rapidly decrease setting temperature. In AUTO mode, setting temperature is not adjustable.

TIMER ON

TIMER ON button


- At unit off, press TIMER ON button, HOUR ON will blink and display,  will be concealed in the TIMER ON setting. During 5 seconds blinking, the value can be adjusted by pressing + or - button, every press of this button, 0.5 hour will be increased or decreased, by continuous pressing the + or - button, 2 seconds later, the value will be changed quickly, 0.5 hour will be changed in every 0.25 second automatically by the remote control. During blinking, press the TIMER ON button to confirm the time. After TIMER ON set up, with repressing the TIMER ON button, the TIMER ON setting will be canceled. After powered on, no timer is defaulted, HOUR ON(OFF) will not display, and only the clock is displayed. After the timer reached the setting time, HOUR ON(OFF) will conceal. Before setting the timer, please adjust the clock to the current actual time.


TIMER OFF

TIMER OFF button

- At unit on, press TIMER OFF button to enter into TIMER OFF setting. The method of setting up is the same as TIMER ON.

■ Guide for Operation - General Operation

1. After powering on, press ON/OFF button, the unit will start to run. (Note: When it is powered on, the guide louver of indoor unit will close automatically.)
2. Press MODE button to select desired running mode.
3. Pressing + or - button, to set the desired temperature.
4. Press FAN button to set AUTO, LOW, MED or HIGH fan speed.
5. Pressing  button, to select the swing.

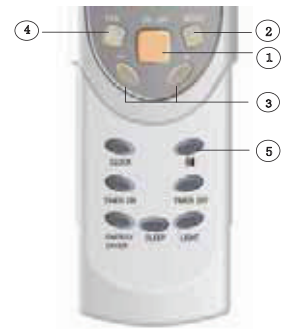

■ Guide for Operation - Optional Operation

1. Press SLEEP button, to set sleep.
2. Press TIMER ON and TIMER OFF button, to set the scheduled timer on or timer off.
3. Press LIGHT button, to control the on and off of the light or display on the unit.
4. Press ENERGY SAVER button to activate the function.






■ Introduction for Special Function

★ About AUTO mode

When AUTO mode is selected, the setting temperature will not be displayed on the remote control, the unit will be in accordance with the room temperature, and automatically select the suitable running method to make ambient comfortable.


★ About Lock

Press + and - buttons simultaneously to lock or unlock the keyboard of the remote control. If the keyboard is locked,  will be displayed on it, press any button,  will blink three times. If the keyboard is unlocked, the  will not display.

★ About Switch Between Fahrenheit and Centigrade

At unit off, press MODE and - button simultaneously to switch between °C and °F.

■ Changing Batteries


1. Slightly press the place with , and push the cover along the arrow.
2. Take out the used batteries. (As show in figure)
3. Insert two new AAA1.5V batteries, and pay attention to the polarity.
(As show in figure)
4. Push the back cover of remote control. (As show inf figure)

NOTE:

When changing the batteries, do not mix used and new batteries, do not mix different batteries, otherwise, it can cause the malfunction of the remote control.

■ Notices



- If the remote control will not be used for a long time, please take out batteries to prevent any damage from liquid leakage.
- The operation should be in its receiving range.
- It should be placed 1m away from the TV or stereo sound sets.
- If the remote control can not work normally, please take out the batteries, then reinsert 30S after, if it does not run normally, change the batteries.
- Be sure that there are no obstructions between receiver and remote control, Don't drop or throw the remote control, Don't let any liquid get into the remote control or put the remote control directly under the sunlight or any place where is very hot.

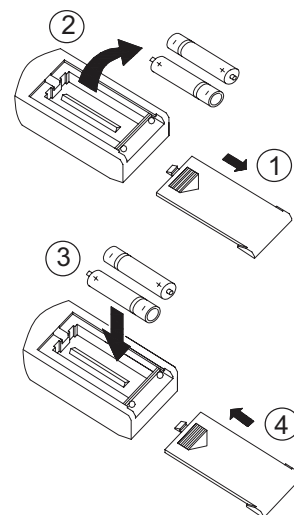

Sketch map for changing batteries

6.2 Remote Control Panel

Note: If wireless remote controller is lost, open the surface panel and operate manually.

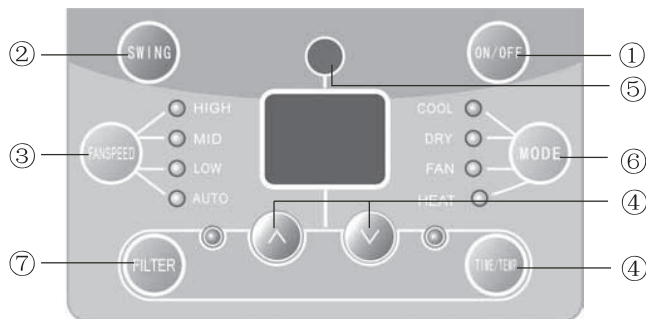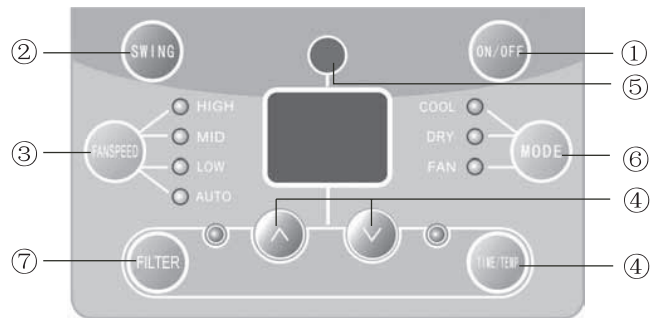

- 1 POWER BUTTON**
Operation starts when pressing this button, and stops when pressing this button again.
- 2 SWING BUTTON**
Activate the automatic air swing function.
- 3 FAN SPEED BUTTON**
Select the fan speed HIGH, MID, LOW and AUTO in sequence.
- 4 TEMP/TIMER BUTTON**
Press the ▲ keypad to increase the set (operating) temperature of the unit, and Press the ▼ keypad to decrease the set (operating) temperature of the unit. The temperature setting range is from 16~30°C
Press the ▲ keypad also to increase the selected time in 1 hour increments, and Press the ▼ keypad to decrease the selected time in 1 hour decrements. The time setting range is from 0~24 hours.
- 5 SIGNAL RECEIVER**
- 6 MODE BUTTON**
Select the operation mode, AUTO, HEAT, COOL, FAN, DRY (for reverse cycle model) or AUTO, COOL, FAN, DRY (for cooling only model).
- 7 FILTER BUTTON**
This feature is a reminder to clean the Air Filter (See Care and Cleaning) for more efficient operation and cooling. The LED (light) will illuminate after 250 hours of operation. To reset after cleaning the filter, press the "Check Filter" button and the light will go off.

VENTILATION LEVER



Ventilation Lever

When the slider at the:



- "OPEN" position, the ventilation door opens to allow air, smoke or odors to be expelled from the room.

When the slider at the:



- "CLOSE" position, the ventilation door is closed and the air will be circulated inside the room and conditioned.